

ANLEITUNG

zum Anschluss von

Tower und KOSTAL PLENTICORE plus/BI





Hinweis

Dies ist ein Handbuch zum Anschluss und zur Inbetriebnahme der Tower-Batterie und des KOSTAL PLENTICORE plus/BI.

Einzelheiten entnehmen Sie bitte dem Benutzerhandbuch der Batterie und des KOSTAL PLENTICORE plus/BI. Dieses Handbuch gilt nur für die aktualisierte Tower-Serie (außer Tower T21), da diese über neue Funktionen verfügt:

- 1. Auf dem BDU-1.5-Verpackungskarton befindet sich ein QR-Code-Etikett mit der WiFi-Seriennummer.
- 2. Die BDU verfügt über ein integriertes WiFi-Modul und der CAN-Kommunikationsanschluss unterstützt CAN/RS485-Kommunikation.
- 3. Auf der rechten Seite der BDU befindet sich ein QR-Code-Etikett mit der WLAN-Seriennummer.



Produkttyp

- Dyness Batteriemodultyp: Tower T7 ESS unit/Tower T10 ESS unit/Tower T14 ESS unit/Tower T17 ESS unit
- Kostal Wechselrichtertyp: PLENTICORE plus 3.0/ PLENTICORE plus 4.2/ PLENTICORE plus 5.5/ PLENTICORE plus 7.0/ PLENTICORE plus 8.5/ PLENTICORE plus 10
 PLENTICORE BI 5.5/26 and PLENTICORE BI 10/26

Installationsschritte



©Dyness behält sich das Copyright für dieses Dokument vor.





Eg Dyness



Dyness

Oder im Menü des Wechselrichters: Settings > Extra options > Additional options > Release options > Activate options > Enter code (Einstellungen > Zusatzoptionen > Zusätzliche Optionen > Optionen freigeben > Optionen aktivieren > Code eingeben).

	 Setting/information Solar portal Device Information Extra options Service menu 	Additional options Released options	↑ Additional options 1 2 3 4 5 6 7 8 9 0 4 0 W E R T Z U I 0 P * + + A D F G H J K L : + +<
9 Wählen Sie Batteriety	rp und Parameter im Wartı	ungsmenü und speichern Sie	die Einstellungen.

希 Home	🙆 Current values 🔟 Statistics 🖃	Log data 🌣 Settings 🗸 🕴 Service menu 🗕 🤷 Update 🛛 Info	
	General	Grid parameterization	
	Energy management	Parameterization report	
	Generator settings	Reactive power settings	
	Battery settings	Start-up ramp	
	External hardware settings	LVRT/HVRT	
	Digital inputs	P(f)	
	Switched output	P(U)	
	Extra options	Settling time	
		Grid and system protection	
		Grid and system protection self-test	

	Dyness	
Battery control	Internal	
Battery settings		
Battery discharge as of grid demand of [W]	100	
Min. state of charge (SoC) [%]	10	
-		
Advanced battery options If the SoC is already very low during initial commission place indexendent of the second source.	ing, it may be necessary to perform a battery service charge to	o 100%. The charging take
Advanced battery options If the SoC is already very low during initial commission place independently of the energy source.	ing, it may be necessary to perform a battery service charge t Start battery charging to 100%	o 100%. The charging take:





Discover Your Nature





Offizielle Website

Digitale Version

Dyness Digital Energy Technology Co., LTD.

www.dyness.com